

Axis LED DMX Profile

DMX Channel	Function	Description	Value
1	Pan	Pan course	0-255
2	Tilt	Tilt course	0-255
3	Pan Fine	Pan fine	0-255
4	Tilt Fine	Tilt fine	0-255
5	Speed	Max speed (tracking mode)	0
		Max to min speed (vector mode)	1-244
		Changes with pan and tilt	245-255
6	Control	Fan Speed (slow to fast)	0-140
		Reset (hold for 3 seconds)	141-150
		No function	210-255
7	Red LED	Red LED 0-100%	0-255
8	Green LED	Green LED 0-100%	0-255
9	Blue LED	Blue LED 0-100%	0-255
10	Strobe	Strobe (slow to fast)	0-255
11	Macro	No function	0
		Red	19-Jan
		Green	20-39
		Blue	40-59
		Yellow	60-79
		Purple	80-99
		Aqua	100-119
		Fast Scroll	120-139
		Red Pulse	140-159
		Green Pulse	160-179
		Blue Pulse	180-199
		Yellow Pulse	200-209
		Purple Pulse	210-219
		Aqua Pulse	220-229
White Pulse	230-255		
12	Dimmer	Dimmer 0% to 100%	0-255